

INSTRUCTION MANUAL

(LIGHT DUTY USE ONLY)

Electric Knife

MODEL NO: HEA841



AC 220-240V 50/60Hz 95W

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

- a) Read all instructions
- b) Do not operate knife in water or under running water
- c) Close supervision is necessary when any appliance is used by or near children.
- d) Disconnect when changing blades.
- e) Avoid contacting moving parts.
- f) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- g) The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- h) Do not use outdoors.
- i) Do not let cord hang over edge of table or counter.
- j) Do not let cord contact hot surface, including the stove.
- k) Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.

SAVE THESE INSTRUCTIONS

USER MAINTENANCE

Any other servicing, aside from cleaning should be performed by an authorized service representative. The manual or other literature packaged with the product shall also indicate that the product is for household use.

CAUTION:

Unplug before handling blades or the equivalent.

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

Do not operate knife in water or the equivalent.

Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.

ASSEMBLY:

1. Do not plug in to mains before the blades have been inserted.
2. The palm is on the dull side of the blade and the fingers away from the sharp edge. Lay both blades parallel to each other with the metal pin from one blade to be locked into the slot of the other. Grip both blades together at the finger protector and glide into the housing until they snap in. Test the security of the blades by applying a light pressure in the reverse direction. (Attempting to remove the blades.) For this operation, it is recommended to have the protective sheath over the blades in order to avoid an accident.
3. The appliance is now ready for operation.

REMOVING BLADES

1. Unplug the unit.
2. Press the eject button. The blades will eject automatically.
3. Disconnect when changing blades.

OPERATION

1. To operate the knife, press the safety “press and slide” switch forward with your thumb.
2. To cut the food, simply guide the blades through the food. It is not necessary to move the knife, as the double cutting action of the two blades will slice the food quickly, easily and neatly. To cease cutting, release pressure from the switch, which automatically turns the appliance off.

CLEANING INSTRUCTIONS

1. To clean the outer surface of electric knife, use a sofa damp cloth and dry it afterwards with a dry towel. Clean only after unplugging the electric knife from the mains supply.
2. Never use metal polish.
3. All removable parts on the electric knife should be detached and cleaned thoroughly in warm, soapy water at regular intervals.
4. The knife is factory lubricated and requires no further lubrication.

SAVE THESE INSTRUCTIONS

COMPLIANCE



All Chefmaster parts and products have under gone a stringent testing process to ensure that comply with the provisions of the relevant specific standards and all UK legislations.

Meanwhile, they also comply with all European standards and specifications.

All Chefmaster products carry the UKCA and CE approval symbols.